

HOW TO ACTIVATE THE ALARM

Open the unit, there should be one LED light on the Mains.

Push Select to toggle the light to Ancil Relay and push the Isolate key. (This should stop the air conditioning from turning off each time the evacuation alarm is sounded).

Push Select to toggle to Zone 1.

Push Test (then push Silence which will stop the ear piercing ringing at the unit).

HOW TO RESET THE ALARM

Push Reset

Push select to toggle to Ancil Relay.